

# RADMASTER

## Fitting Instructions

---



### EXISTING SYSTEM

- Switch off central heating system and allow system to cool
- Close radiator inlet and outlet valve
- Protect flooring around each end of the radiator
- Open air inlet valve and undo the union nuts on radiator tails and drain radiator into container, taking care to avoid spillages
- Once draining is complete remove the existing tailpieces, if using 22mm, retain nut from old system and use alongside a 22mm adaptor (also available)
- Wrap male thread of Isolating Tails with PTFE tape
- Fit the tails to the radiator
- Fit to the inlet and outlet valves using the union nut and olive or adaptor provided
- Open inlet and outlet valves and air vent valve
- Refill radiator
- When the radiator is full close off air valve and check for leaks
- Switch on central heating system and recheck for leaks

### NEW INSTALLATION/NEW BUILD

- The isolation valve is compatible with all systems irrespective of size of inlet/outlet valves (15mm (22mm adaptor available))
- On installation replace the existing tailpiece with the isolation valve and the appropriate nut and olive
- Fit to system

*The radiator can now be removed at any time without the need to drain the radiator or entire system.*



Manufactured under license  
and distributed by MBL  
[www.masefield-beta.co.uk](http://www.masefield-beta.co.uk)