

# TOPY

# INSTRUCTIONS

- 1 - Insert correct filter restrictor into threaded tail.



If pressure > 4 bars (60 p.s.i) :  
whole piece

If 1 bar (14 p.s.i) < pressure < 4 bars  
(60 p.s.i) : cut here (mains pressure)

If pressure < 1 bar (14 p.s.i) :  
cut here (gravity pressure/ header tank)

- 2 - Fit the filling valve. Ensure that the valve does not obstruct the flush mechanism. Do not overtighten the back nut.
- 3 - Turn ON water supply and check the water level is right



HELP [www.wirquin.com](http://www.wirquin.com)

07/08