



NOR400 Fitting Instructions

Tools



Included:
1 x NOR400 Letterplate
1 x Intumescent Liner
Fixing Bolts

All dimensions in mm

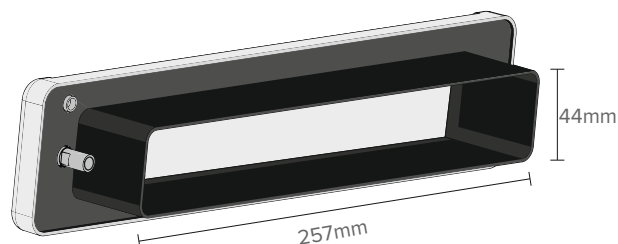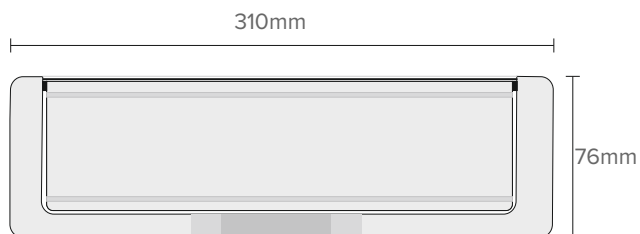

Dimensions without liner



Intumescent liner

1




Intumescent liner


1.1 Remove self-adhesive backing from intumescent liner.

1.2 Wrap the liner around the outer telescopic sleeve ensuring the self-adhesive tape makes full contact with the letterplate. **Note: do not cut liner, use full length as supplied**

2

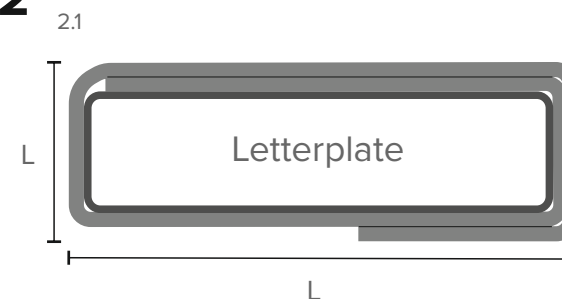

2.2

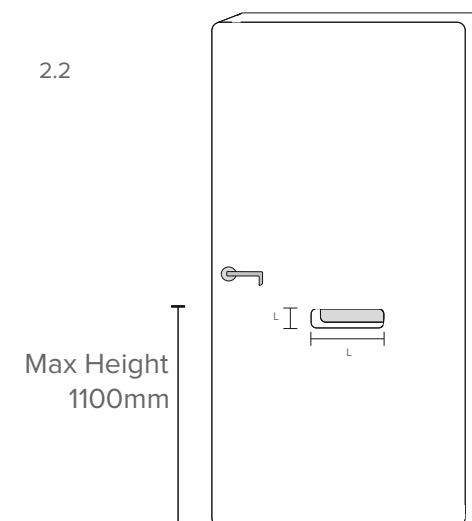


2.1 Measure the overall diameter of the outer telescopic sleeve with liner to assess opening size required (L)

2.2 Using a drill & jigsaw cut aperture in the door leaf to suit (L) ensuring this is no further than 1100mm from the door bottom.

NOR400 Fitting Instructions

3


3.1

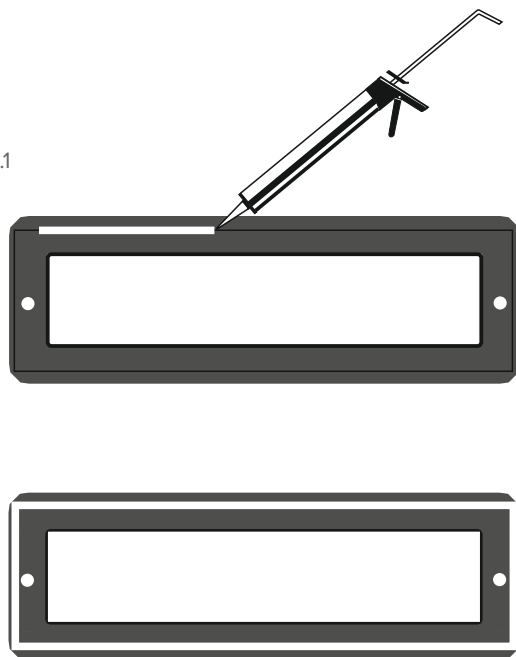


3.1 Apply a thin layer of intumescent mastic (not supplied) behind both face plates.

4

4.1

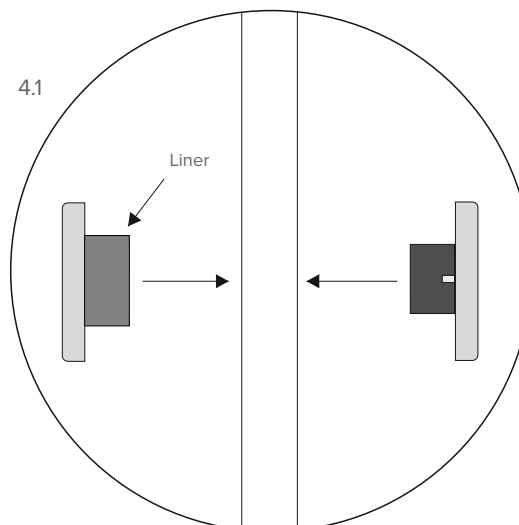

4.2

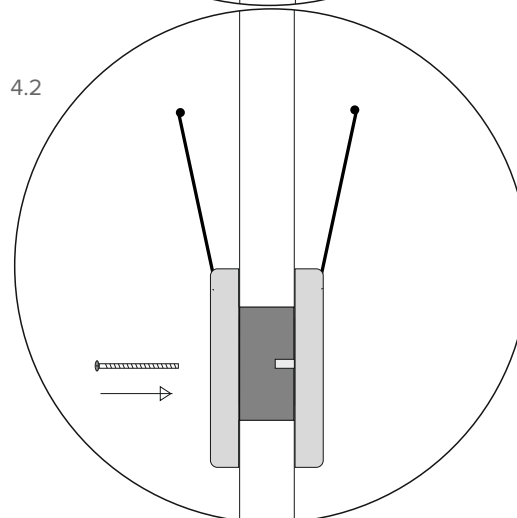


4.1 Insert each side of the letterbox into the aperture making sure the side with the liner attached is on the inside of the door.

4.2 Using bolts provided secure letterbox to the door, use appropriate length bolts to suit door thickness.

5

5.1

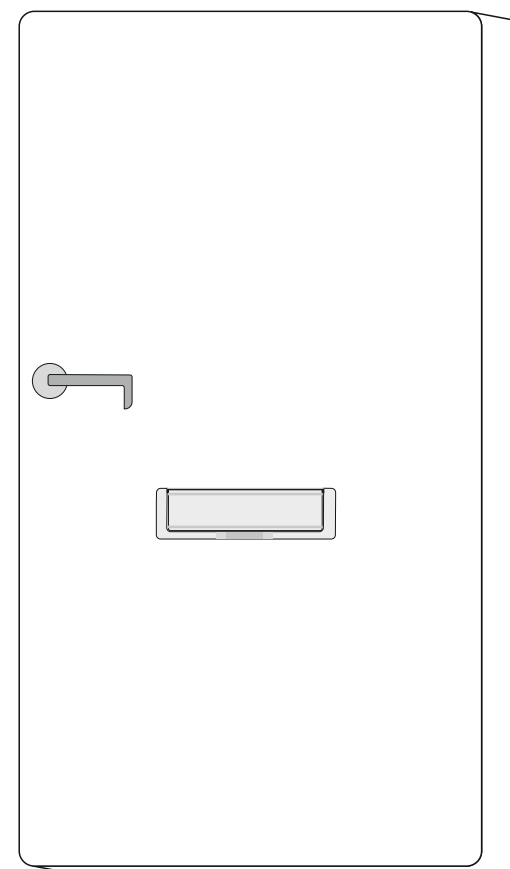

5.1 Clean off any excess mastic with a damp cloth. The unit is now installed.