# CURRENT CONTROL RELAYS WITH INITIAL START UP DELAY & DELAY ON TRIPPING TIMERS

### TYPES: YWRI, YWRI/I (spco) YWRI.CT5, YWRI/I.CT5 (spco)

### FEATURES

- Din rail mounted
- SPCO output
- Three selectable input ranges 5mA to 10 Amps
- Dedicated 5 Amp "CT" input version
- Selectable for both AC or DC current
- Selectable manual or auto reset
- Initial start up adjustable time delay 0.1-10 secs
- Adjustable delay on rising current 0.1-10 secs
- Adjustable delay on falling current 0.1-10 secs
- Dual LED indication

### SUMMARY OF UNITS

**YWRI** - Din rail current sensing relay, selectable via a wired link for either AC or DC current.

**YWRI/I** - Din rail "inverse" acting current sensing relay, selectable via a wired link for either AC or DC current.

### MODE OF OPERATION

### YWRI

**"Auto Reset" without latching mode**. This mode is determined by terminals Y1 & Y2 left open. The output relay is energised when the monitored current rises above the selected set level, set via the front potentiometer. The output relay will de-energise when the current falls back below the level selected less the set hysteresis adjustable 5 to 50%, set via a second potentiometer. For example set level at 4Amps, hysteresis at 30% will result in energisation at 4Amps and de-energisation at 2.8 Amps. If the auxiliary supply is lost at any time the relay will also de-energise.

**"Manual Reset" without latching mode**. This mode is determined by a wired link between terminals Y1 & Y2. The output energises when the monitored current rises above the level selected via the front potentiometer. Once energised the relay will remain latched even if the monitored current falls below the set level less any selected hysteresis. Resetting is achieved by opening the link between terminals Y1 & Y2 or by removing the auxiliary supply. If whilst resetting the monitored current is still above the set level a reset will not be achieved. It is normally preferable in the latching mode to have the adjustable hysteresis set at minimum.

#### <u>YWRI/I</u>

"Auto Reset" without latching. This version is only available as an "auto reset" device and the output relay acts in an "inverse" way, i.e. the output relay is normally energised and de-energises when the monitored current rises above the level selected via the front potentiometer. It will re-energise when the monitored current falls below the set level less the set hysteresis adjustable 5 to 50%, set via a second potentiometer. It should be noted that on first connection of the auxiliary supply the relay will energise for 0.1 secs (i.e. current below the set level), whilst the scanning circuit is determining the level of current being measured. This time can be extended up to 10 secs via the adjustable "start up delay" thus allowing a longer stabilisation period.

#### Adjustable Time Delays

The YWRI and YWRI/I current relays have 3 independently adjustable 0.1-10 secs time delays. Initial start up delay timer, activated by the connection of the auxiliary supply, therefore if a control circuit is going to be permanently live this time delay will only ever be active once, a delay on rising current when the monitored current rises above the set level as selected by the front potentiometer and a delay on falling current, when the monitored current falls below the set level plus the hysteresis.

### OTHER APPLICATION NOTES

#### Selection of AC or DC Current


Din rail mounted units can be selected for either AC or DC current monitoring via a wired link between terminals B1 & IK. B1 & IK linked = DC current. B1 & IK open = AC current.

#### Use of Current Transformers

The three current ranges are determined by wiring to different terminals. For monitoring currents above 10Amps AC a current transformer is required. On applications requiring a current transformer with a 5 Amp secondary use the **YWRI.CT5** or **YWRI/I.CT5** dedicated current transformer input units. A range of 1 Amp secondary CT's are available from our CT section page 156 to 164.

#### **DC Auxiliary Supply Versions**

DC auxiliary supply versions are as standard non isolated. For these versions the supply and the measured current must be isolated from each other and must not exceed 50V DC. On request at extra cost isolated versions can be manufactured utilising internally a DC to DC converter.

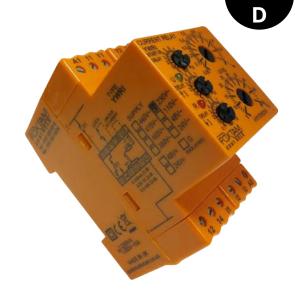



#### **Supply & Measuring**

ouppiy a measuring	
Nominal supply tolerance:	±15%
Isolation AC versions:	Via transformer
Isolation DC versions:	No as standard or:-
	Yes via optional internal DC to DC converter
Power consumption:	3VA max
Hysteresis:	Ajustable 5 to 50% of le
Repeat accuracy:	$\pm 2\%$ at constant ambient
	$\pm 5\%$ across temperature range
Response time:	100 mSec on make
	200 mSec on break
Input ranges selectable:	5-100mA (max overload 5A for less than 1 sec)
	50mA-1A (max overload 17A for less than 1 sec)
	0.5-10A (max overload 55A for less than 1 sec)
Input impedances:	100mA range 1 0hm
	1A range 0.1 Ohm
	10A range 0.01 Ohm
Relay output	
Output contacts:	SPC0 10Amps/250V AC1
Mechanical life:	30 Million ops
Electrical life:	200K ops at max rated load
General	
Operating temperature:	-20°C to +65°C
Storage temperature:	$-20^{\circ}$ C to $+65^{\circ}$ C
Max cable size:	4mm
CF marked:	Yes
In accordance with:	FN61000-6-1: 2007
	EN61000-6-1: 2007 EN61000-6-3: 2007
	LINUTUUU-U-J. 2007

#### **ORDERING INFORMATION**


<u>TYPE</u> YWRI (Din rail AC or DC current) YWRI/I (Din rail "inverse" AC or DC current)

#### **COIL VOLTAGE** 440VAC 110VAC 415VAC 48VAC 400VAC 24VAC \*48VDC 380VAC \*24VDC 230VAC



69

\* No isolation on DC versions as standard, on request at extra cost isolated versions are available.

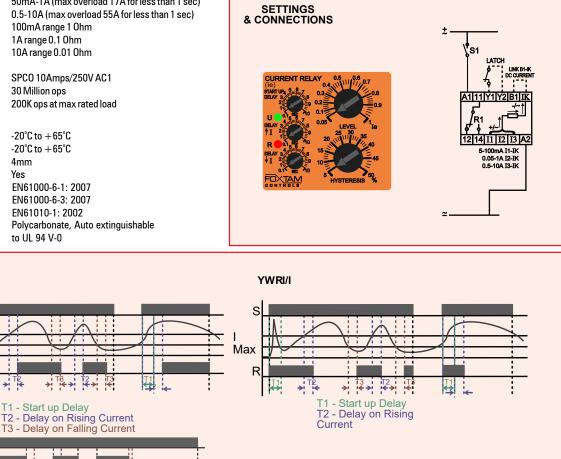

### TYPES: YWRI.CT5, YWRI/I.CT5 (spco)

#### **SPECIFICATIONS**

Supply & Measuring Input range:

0.25-5A (max overload 2 5A for less than 1 sec) Input impedances: 0.022 Ohm.

All other specification is the same as the standard YWRI.

CONNECTIONS 12 14 ~




YWRI

FUNCTION

S

Max

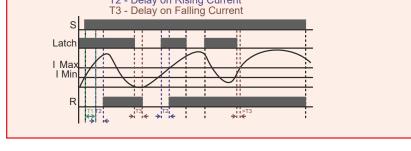

As an option the YWRI current control relay is available with a dedicated 5 Amp input designed to work in conjunction with any C.T. with a 5 Amp secondary. The YWRI.CT5 has the same mode of operation as the standard versions.

## **ORDERING INFORMATION**

ТҮРЕ	<b>COIL VOLTAGE</b>	
YWRI.CT5 (Din rail AC current)	440VAC	110VAC
YVVRI/I.CT5 (Din rail "inverse" AC current)	415VAC	48VAC
	400VAC	24VAC
	380VAC	*48VDC
	230VAC	*24VDC

\* No isolation on DC versions as standard, on request at extra cost isolated versions are available.